



Ph: 954-763-6581
Fx: 954-765-1425
www.bestrentalservice.com

OPERATING INSTRUCTIONS BIG JOHN GAS GRILL (16" X 32")

WARNINGS: ALL GAS COOKING EQUIPMENT MUST BE USED OUTSIDE. Do not operate this unit until you have read and understand both sides of this instruction sheet. If a malfunction is discovered at any time, the use of this grill must be discontinued immediately. Best Rental Service does not assume any liability for injury due to careless handling and/or reckless operation of this unit.

1. Make sure all valves are turned off. Connect the regulator to the propane tank. Move the propane tank away from the grill the full length of the hose. Open the propane tank valve.
2. Safety check all connections with a leak detector or soap and water for leaks. **DO NOT USE A MATCH OR OPEN FLAME AS AN EXPLOSION MAY RESULT.** Do not use grill if any leaks are detected. The final safety check is up to you.
3. Light a long fireplace match. Put through the grate and ONLY THEN open the far left lever towards the front of unit and ignite the burner tube.
4. Repeat lighting the burner tubes from left to right. If unit does not light, wait five (5) minutes for gas to disperse and repeat above instructions.
5. Operate burners on high until lava rock becomes hot. Then turn the burners down to a lower setting and allow the radiant heat of the rock to provide the heat for cooking.
6. Cooking is the same as any gas-fired barbecue. Any sauces should be applied toward the end of cooking to eliminate flare-ups.
7. To turn off grill: Close tank valve on the propane tank. Close all burner valves and disconnect the regulator from the tank. **The regulator always stays connected to the hose. A replacement charge will be incurred for grills that are missing the regulator.**
8. The grill must be returned clean for the deposit to be refunded.

By my signature on these instructions, I acknowledge that I have read both sides and understand same, and have received a copy of them.

Signature

Print Name