



Ph: 954-763-6581

Fx: 954-765-1425

www.bestrentalservice.com

OPERATING INSTRUCTIONS - GARLAND RANGE "E"

WARNINGS: ALL GAS COOKING EQUIPMENT MUST BE USED OUTSIDE. Do not operate this unit until you have read and understand both sides of this instruction sheet. This unit should never be operated by a minor. If a malfunction is discovered at any time, the use of this unit must be discontinued immediately. Best Rental Service does not assume any liability for injury due to careless handling and/or reckless operation of this unit.

1. Make sure all valves are turned off. Connect the regulator to the propane tank and open the fuel tank valve.
2. Check all connections with gas leak detectors, soap solutions or equivalent for leaks. **DO NOT USE A FLAME.** Do not use if any leaks are detected.
3. To light top burners: Open pilot burner. Remove top grates and ring grates. Check flash tubes to see if they are properly positioned on burner charge ports. Light pilots. Turn valve completely on. Burner flame should be 1/2" stable blue flame and should impinge on the underside of pot on ring grate. Should burner ignition fail within 5 seconds. Turn burner valve off and repeat steps after ventilating area.
4. To light oven: Open oven door and slide out bottom of oven. This exposes pilot light. Depress and hold reset button located in the hole in the lower front of the oven (beneath the oven door) while lighting the oven pilot. (The button faces down so you must push up). Continue to depress the reset button for 60 seconds. Release button. If pilot does not stay lit, repeat this procedure after ventilating area (at least 5 minutes). This allows accumulated gas to dissipate. Turn oven on and set thermostat to desired temperature. During normal operation, if pilot goes out, ventilate area (at least 5 minutes) before attempting to relight oven.
5. To turn off burners and oven: Close fuel tank valve on the propane tank. Burners: Turn all valves to the "OFF" position. Range: Turn all valves, oven valve and thermostats to the "OFF" position. Disconnect the regulator from the tank. The regulator always stays connected to the hose. A replacement charge will be incurred for units that are missing the regulator.
6. The unit must be returned cleaned for the deposit to be refunded.

By my signature on these instructions, I acknowledge that I have read both sides of this instruction sheet and understand same, and have received a copy of them.

Signature

Print Name

Additional Instructions→