



Ph: 954-763-6581
Fx: 954-765-1425
www.bestrentalservice.com

OPERATING INSTRUCTIONS SINGLE BURNERS # 1, 2, 3, 4 & 5.

WARNINGS: ALL GAS COOKING EQUIPMENT MUST BE USED OUTSIDE. Do not operate this unit until you have read and understand both sides of this instruction sheet. This unit should never be operated by a minor. If a malfunction is discovered at any time, the use of this unit must be discontinued immediately. Best Rental Service does not assume any liability for injury due to careless handling and/or reckless operation of this unit.

1. Make sure all valves are turned off. Connect the regulator to the propane tank and open the fuel tank valve.
2. Check all connections with gas leak detectors, soap solutions or equivalent for leaks. **DO NOT USE A FLAME.** Do not use if any leaks are detected.
3. Light a long fireplace match and hold it next to the burner ring while slowly opening the burner valve.
4. Burner flame should be 1/2" stable blue flame and should impinge on the underside of pot on grate.
5. To turn off burner: Close the fuel tank valve on the propane tank and close valve on the unit burner. Disconnect the regulator from the tank. The regulator always stays connected to the burner hose. A replacement charge will be incurred for burners that are missing the regulator.
6. The burner must be returned cleaned for the deposit to be refunded.

By my signature on these instructions, I acknowledge that I have read both sides of this instruction sheet and understand same, and have received a copy of them.

Signature

Print Name

Additional Instructions→