



Ph: 954-763-6581
Fx: 954-765-1425
www.bestrentalservice.com

OPERATING INSTRUCTIONS SMALL PANCAKE GRIDDLE

WARNINGS: ALL GAS COOKING EQUIPMENT MUST BE USED OUTSIDE. Do not operate this unit until you have read and understand both sides of this instruction sheet. This unit should never be operated by a minor. If a malfunction is discovered at any time, the use of this unit must be discontinued immediately. Best Rental Service does not assume any liability for injury due to careless handling and/or reckless operation of this unit.

1. Position grease tray under griddle spout.
2. Make sure all valves are turned off. Connect the regulator to the propane tank and open the fuel tank valve.
3. Check all connections with gas leak detectors, soap solutions or equivalent for leaks. **DO NOT USE A FLAME.** Do not use if any leaks are detected.
4. Depress and hold gas safety button (red button on left side of unit) for 15 seconds. Push igniter button repeatedly until pilot is lit. Continue to hold safety button for 60 seconds. If igniter button fails to work the pilot may be lit using a long fire place match.
5. To ignite burner, push and turn the control valve clockwise to desired flame height.
6. To turn off: Close fuel tank valve on the propane tank. Turn burner off. Disconnect the regulator from the tank. The regulator always stays connected to the hose. A replacement charge will be incurred for units that are missing the regulator.
7. The unit must be returned cleaned for the deposit to be refunded.

By my signature on these instructions, I acknowledge that I have read both sides of this instruction sheet and understand same, and have received a copy of them.

Signature

Print Name

Additional Instructions→