

## OPERATING INSTRUCTIONS METRO TALL HEATING CABINET

Warnings: Do not operate this unit until you have read and understand the instructions. This machine may cause serious injury and should never be operated by a minor. The cabinet must be properly grounded to prevent electrical shock. If a malfunction is discovered at any time, the use of this machine must be discontinued immediately. <u>Best Rental Service does not assume any liability for injury due to careless handling and/or reckless operation of this equipment.</u>

<u>This cabinet is designed to maintain the temperature of HOT prepared foods</u>. <u>It will not cook them</u>. On the inside walls of the cabinet are a series of rack hangers. These hangers have two slots. Depending on usage (food pans or sheet pans), the racks may have to be re-positioned on these slots for the proper fit.

## 1. With POWER switch OFF, plug lead cord into a standard grounded 15 amp receptacle.

## CAUTION: THE WATER PAN MUST BE IN PLACE DURING OPERATION.

2. To introduce limited humidity, fill the 1 1/2 quart capacity water pan to 1/2" from top with HOT clean tap water. During operation, check water level every 3 hours and refill as necessary. The unit may be operated without water if humidity is not desired.

3. Snap POWER switch to ON. The red POWER light will now glow as will the yellow indicator light, and the blower will begin circulating air.

4. Turn the TEMPERATURE thermostat to setting 10. The holding unit is now in operation.

5. After allowing the cabinet to <u>PREHEAT FOR APPROXIMATELY 45/60 MINUTES</u>, reduce the thermostat setting to 6/8. In a room of average temperature (72 degrees), this should provide 150 to 170 degrees. Opening the door often makes it harder for the oven to stay at maximum temperature. Adjustments to the temperature setting may be made as necessary.

NOTE: The POWER (red) light will glow as soon as the POWER switch is switched ON and will continue to glow until switched OFF. The yellow indicator light will go on and off as the thermostat cycles. The blower will operate as long as the POWER switch is ON. If the yellow light is not illuminated, this indicates that the cabinet has achieved the preset TEMPERATURE level, NOT that the unit has been switched OFF.

By my signature on these instructions, I acknowledge that I have read and understand same, and have received a copy of them.

Signature